

PARTS LIST

	Description	Qty.
	Fender Tip Front	1
Bag No. 463		
55-568220-000	Screw, Phillips 5 x 20	2
42-423050-000	Nut M5	2
49-490100-000	Washer	2



Power Drill with 1/4" Drill Bit
Grease Pencil or scribe
No. 2 Phillips Screwdriver
8mm Wrench
Block of wood to fit between the fender and tire



PREPARATION:

Position motorcycle securely on its sidestand.

Clean Fender

The front fender tip extends down past the edge of the fender when installed. Note: where fender will fit into position. **Figure 1.**

Squeeze in on the fender, position the Fender Tip. **Figure 2.**

Make sure the Fender Tip is symmetrical and is tight against the fender.

Mark the hole locations on the fender using the grease pencil or scribe. Remove the tip. **Figure 3.**

With the wood block between the Fender and the tire, drill a 1/4" hole through the fender at the marked locations. **Figure 4.**

INSTALLATION

1. Position the Fender Tip in place on the front fender so the holes align.
2. Place the Phillips screws through the Fender Tip and fender. Add a washer at the back. Thread the nut onto the screw. **Figure 5.**
3. Tighten the screws securely. The nuts should be tight enough to avoid rattles.
4. Check the tightness of the nuts after about ten miles of riding.

CARE AND MAINTENANCE: Clean and polish with a chrome cleaner/polish. Check tightness of the nuts regularly.



Figure 1



Figure 2



Figure 3

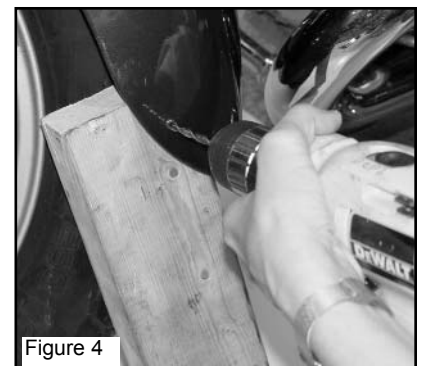


Figure 4



Figure 5