



Hex Key Wrench, 4mm
Torque Wrench

PARTS LIST

Index	Part No.	Description	Qty.
1	Z9031	Backrest	1

PREPARATION

1. Secure the motorcycle on its side stand.
2. Remove the original grab rail. (4mm hex wrench.) Save the original four screws and two plastic end caps from the grab rail. These items will be re-used in the installation of the backrest.

INSTALLATION

1. Insert the two plastic caps removed from the original grabrail into the ends of the backrest.
2. Use the 4 screws removed in Preparation Step 2. to install the ZTechnik backrest at the location of the original grab rail. (4mm Hex Wrench.)
3. Tighten all four mounting screws to 5.1 ft lbs (7Nm).



CARE: The pad is made from heavy gauge synthetic leather. Clean pad with a soft cloth dampened with water and a leather or vinyl cleaner.

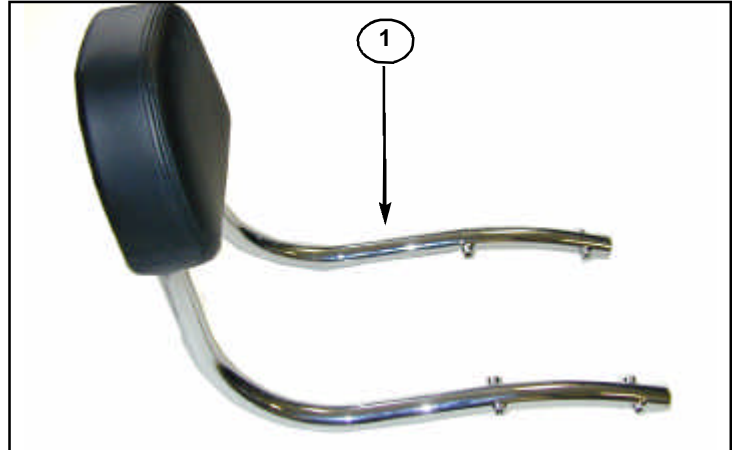


Figure 1



Figure 2